



Name of lock component


5.

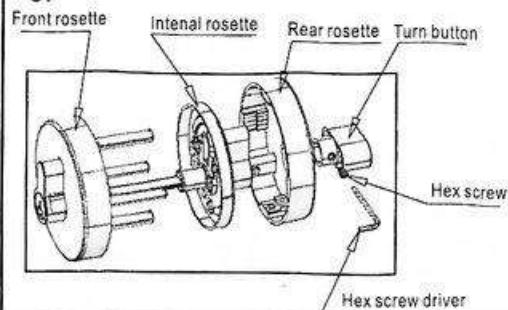

6.

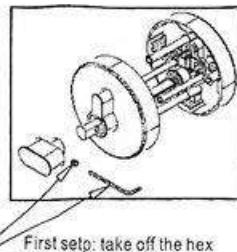


7.

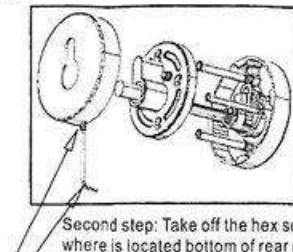


8.


A.

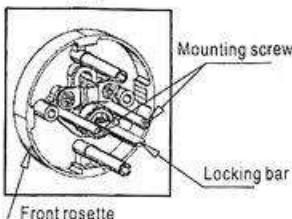

B.

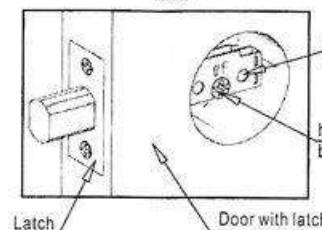


C.

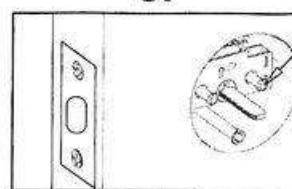


9.

Fourth step: According correct direction to install the internal rosette and make it stable by machine screw

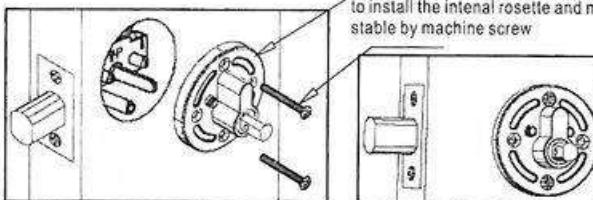


10.


A.

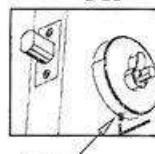


B.

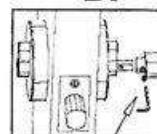

C.

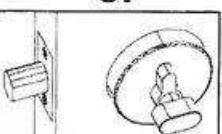

Fold on dotted line and fit on door edge
Make 1 (25.4mm) hole at center of dooredge

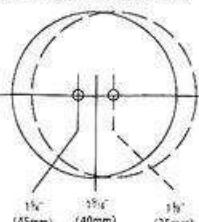

For backset 2 5/8" (70mm)

For backset 2 5/8" (60mm)

Fits 2 5/8" (54mm) cylinder hole

$\varnothing 2\frac{5}{8}''(54mm)$

